



Set the lug against a suitable hole in the opposite tie. Adjust so bolt and nut fit exactly between lug and tie. 2 ties can be assembled with an overlap for longer sections (max. length 2200 mm). Don't forget the coach bolts on the rear. Assemble the brackets on the ladder and then to the chimney tie. Tighten, cut off any overhang, zinc spray.

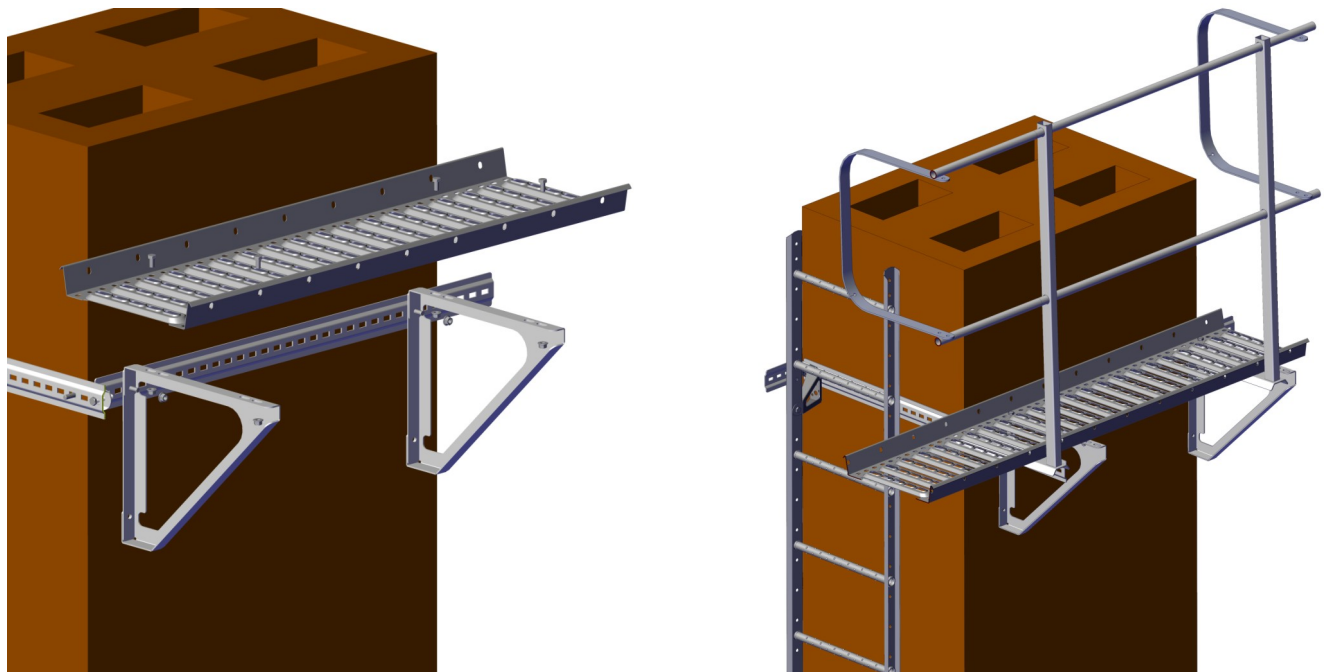

Mount the brackets on the chimney tie and secure the platform using the accompanying bolt kits. Any railing must be assembled according to the separate assembly instruction.

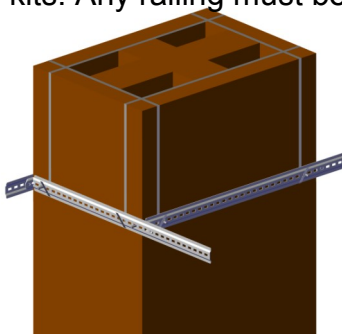

**Assembly tips!** Use metal strip to hold the chimney tie in place while you tighten the screw.