
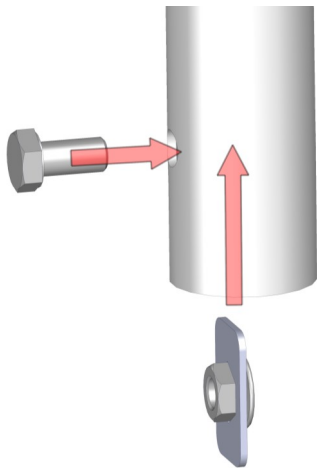



Drill holes according to table

| | |
|---------------|----------|
| UI2042/UB2042 | - 1835mm |
| UI1542/UB1542 | - 1335mm |
| UI1042/UB1042 | - 835mm |
| UI0742/UB0742 | - 535mm |
| UI0542/UB0542 | - 335mm |
| UI0442/UB0442 | - 235mm |


NOTE! The edge distance applies for M12 expander in concrete.

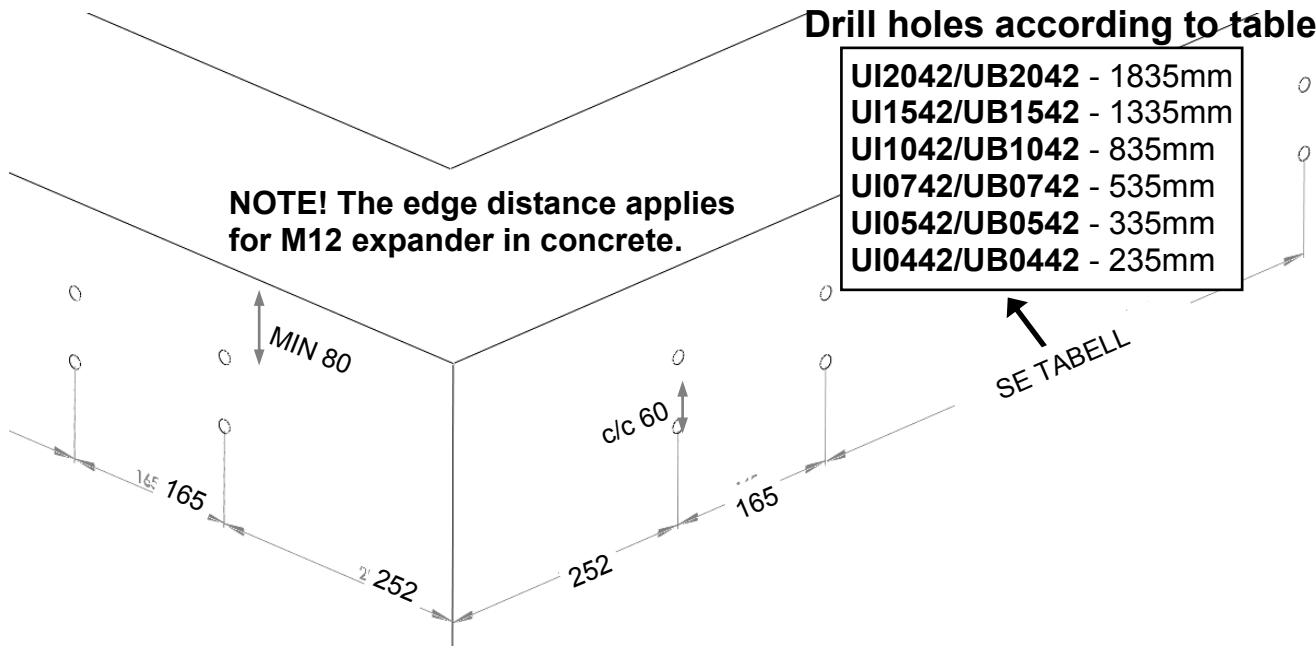

Mount the locking device in the railing

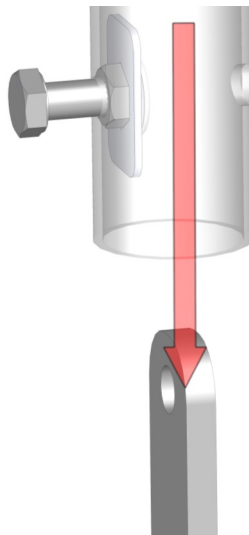

Thread the railing on to the bracket

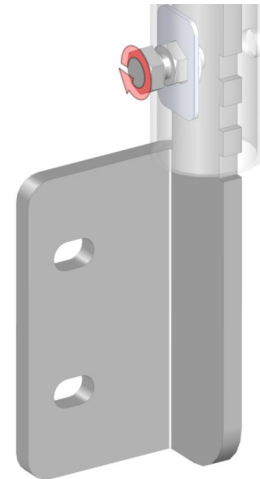

Tighten the locking devices.
Tighten the securing bolts.

Finally, mount the coupling between the railings.

