


The intermediate rails are threaded through the posts and locked with self-drilling steps.

Dig a hole \varnothing 50cm, depth 45cm. Fill with macadam or concrete. Use railing separation: 1m. Mount the locking device in the posts, thread on and tighten. Push the rails into the posts.

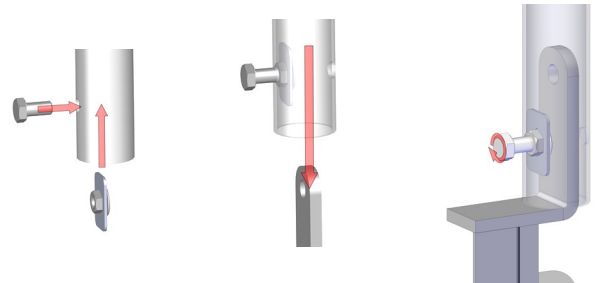

Now place the handrail on the posts and screw in place from below, through the rails using self-drilling steps. Joints are made using internal tube connection.

