

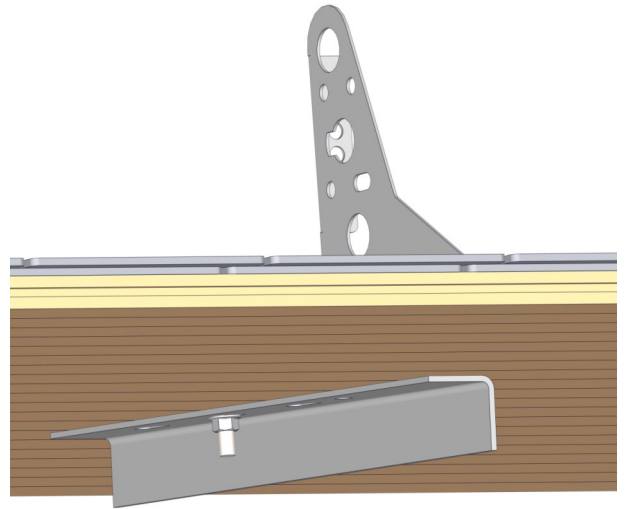


The slate mount replaces the slate plate. The slate plate is fitted in and holes for fixing are drilled. The slate mount is bolted to the back plate using countersunk M10x60

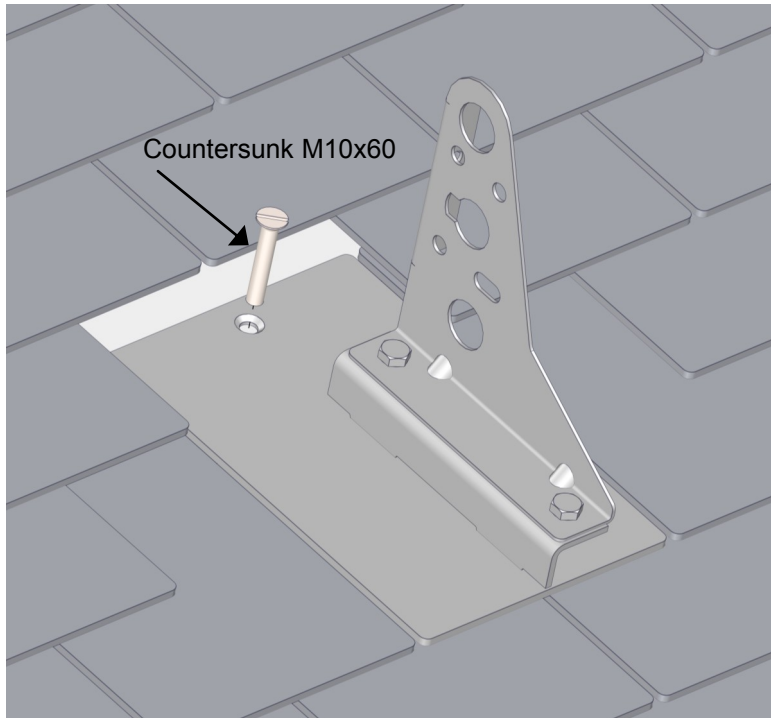

The back plate is mounted in the direction of the roof's slope.

The bracket is bolted to the slate mount using 2 M10x20 + nuts.

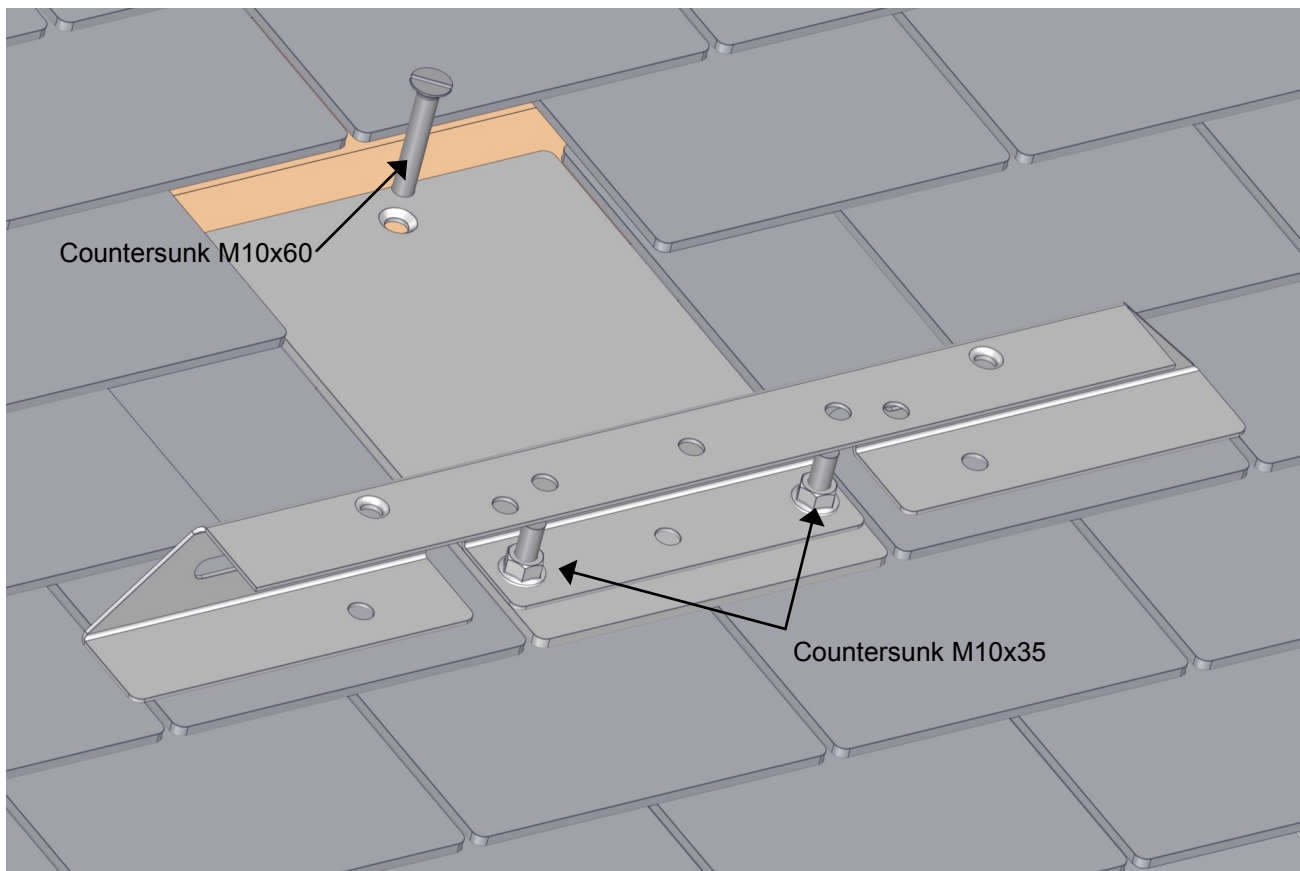

The spacer is bolted to the slate mount using countersunk M10x35. Washers are placed between the spacer and slate mount, to even out the differences in height to neighbouring slates.