


The intermediate rails are threaded through the posts and locked with self-drilling steps.

Bolt the brackets to the floor using suitable screws. Use railing separation: 1000 mm Mount the locking device in the posts, thread on and tighten. Push the strips into the posts.

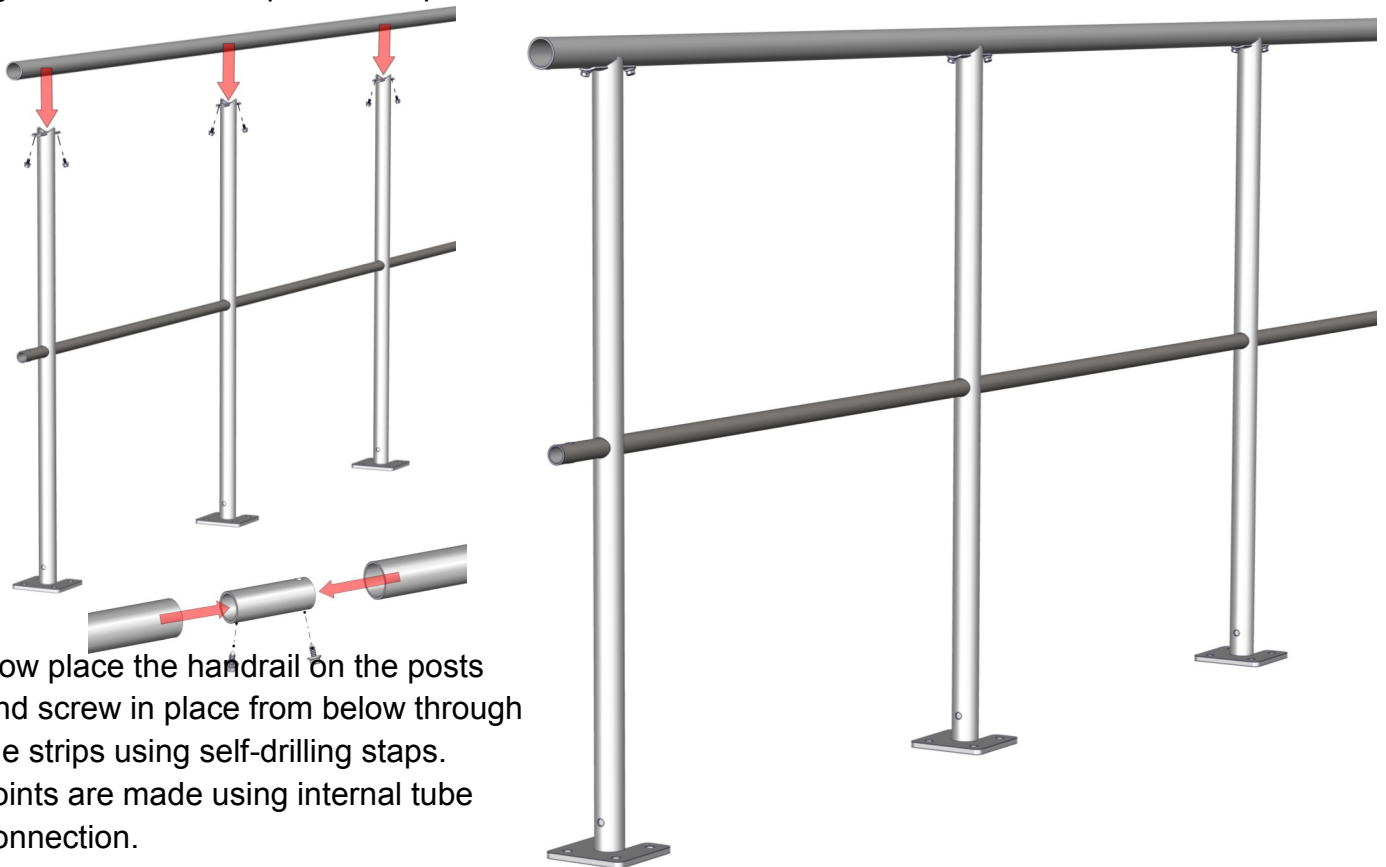

Now place the handrail on the posts and screw in place from below through the strips using self-drilling steps. Joints are made using internal tube connection.